

BR20 Minilock Fitting Instructions For Bradley Autohead 2750/3500 Hitch

Please Note:

To remove the lock bolt, hold the head of the bolt to prevent it from turning, push the key in and turn 1/4 turn anti-clockwise, pull out the lock bolt with the key. Place aside carefully. Do not allow dirt to enter the lock.



1. Lift the handle and insert the dummy ball ensuring the handle returns to the fully down position.



2. Tilt the rear of the red hitch lock cover back and "feed" the handle through the slot provided.



3. Pivot the red cover down towards the front so it rests on top of the hitch.



4. With the lock bar in the unlocked position, insert it into the red cover and push it into the lock housing. When in position, turn the key 1/4 turn clockwise to lock and remove key.

Note: If the hitch lock is required when the trailer is attached to a tow vehicle, the dummy ball is not required.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire,
TF13 6DH.

Tel: 01952 728171 Fax: 01952 728117

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism & ball bearings with WD40 (or equivalent) minimum every four months.