
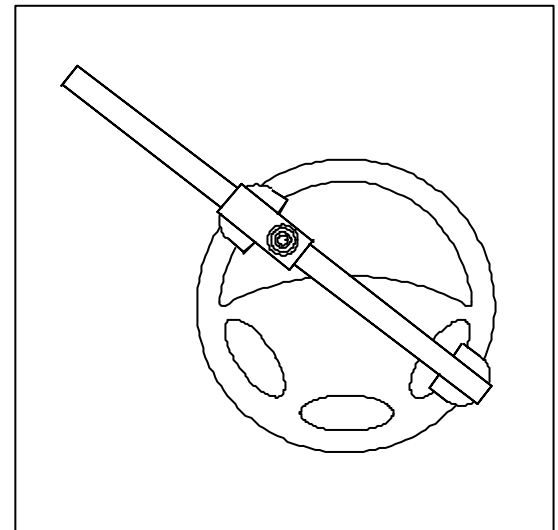


# Steering Wheel Lock Fitting Instructions

## FITTING

1. Place the bottom hook anywhere inside your steering wheel.
2. Place the other hook inside the opposite side of your steering wheel, and slide out as far as possible.
3. Then simply snap shut the lock and your Bulldog Steering Wheel Lock is securely fixed in place.

If you have any problems fitting the Bulldog Steering Wheel Lock then please call 01952 728171.

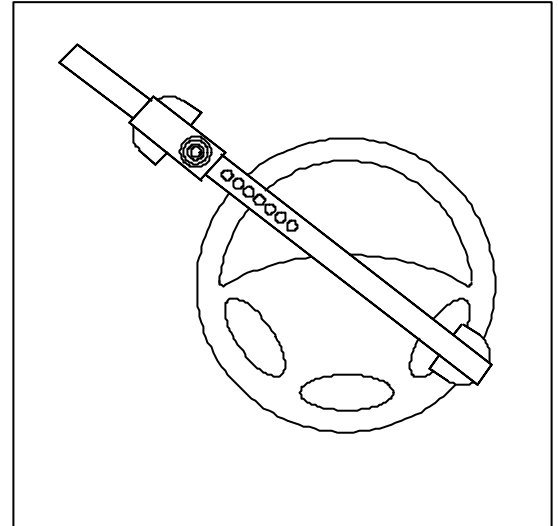

## REMOVAL

### **IMPORTANT.**

To remove the Bulldog Steering Wheel Lock, insert key, rotate 1/2 turn, pull on key until lock pulls or pops out.

### **Bulldog Security Products**

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171 Fax: 01952 728117

Email sales@bulldogsecure.com www.bulldogsecure.com

BW01-1

### **Lock Lubrication.**

**IMPORTANT** - To ensure free movement of the lock, spray lock mechanism with WD40 (or equivalent) minimum every four months.