



1. To Lock Eyelock.

Remove lock bar, place Eyelock over trailer eye and insert lock bar. Fit retaining cup to lock bar then turn key 1/4 turn clockwise to lock. Fit plastic dust cap over lock bolt head.

2. To Unlock Eyelock.

Remove dust cap, insert key and rotate 1/4 turn anti-clockwise to remove lock bolt, remembering to hold retaining cup, then withdraw the lock bolt.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.
Tel: 01952 728171 Fax: 01952 728117
Email sales@bulldogsecure.com www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism & ball bearings with WD40 (or equivalent) minimum every four months.