

## INITIAL SETTING UP

First select the three angular steel claws. Select the holes which give the best fit on the tyre width. Secure with button head screws. When initially trying the clamp around the tyre take care to select which tapped hole gives the tightest fit. The easiest method is:- Insert two of the claws into the silver arm facing inwards to the width of the tyre, then secure each in place with one button head screw using the allen key provided. The third claw locates in the yellow stem facing inwards at the required setting as before.

## BULLDOG AUTOCLAMP SECURED IN APPROX 5-10 SECONDS

1. The auto Clamp is fitted by taking the silver arm and twisting it into the angle as shown in the picture.
2. Then push the arm into the wheel arch and slide around the wheel into place.
3. The next step is to take the yellow stem and slide it into the silver arm until all the three points of the clamp are in contact with the tyre.
4. Then press the lock in until it clicks. When the clamp is unlocked the key is not required to lock it again leaving both hands to secure the clamp in approx 5 - 10 seconds.



## REMOVAL

**IMPORTANT.** To remove the clamp, insert the key and rotate 1/2 turn, pull on the key, and/or press down on the silver arm until the lock pops out.

For further guidance view our fitting video at [www.bulldogsecure.com](http://www.bulldogsecure.com)



### Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.  
Tel: 01952 728171 Fax: 01952 728117  
Email [sales@bulldogsecure.com](mailto:sales@bulldogsecure.com) [www.bulldogsecure.com](http://www.bulldogsecure.com)

REG.PB36-5

### Lock Lubrication.

**IMPORTANT** - To ensure free movement of the lock, spray lock mechanism with WD40 (or equivalent) minimum every four months.