


FTS1000L Fuel Tank Lock Instruction



1. Remove the yellow filling cap.

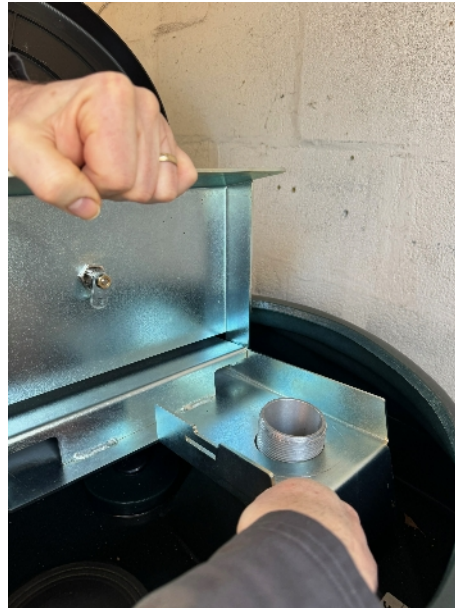

2. Unlock the lid and angle the shield plate under the lip of the tank and place it over the filler neck.



3. Whilst supporting the shield plate, hand tighten the retaining nut in place.



4. Continue to support the shield plate and tighten the nut with the spanner provided.



5. Replace the yellow filling cap.



6. Lock the lid in place.

Registered Design Number 6332624

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

Bulldog Security Product

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.
Tel: 01952 728171 Email sales@bulldogsecure.com
www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism with WD40 (or equivalent) minimum every four months.