


**IMPORTANT:** In order to fit Hitchlock the handle must be tripped when not hitched to a vehicle



1. Lower Hitchlock over the front fixing bolt of the hitch head.

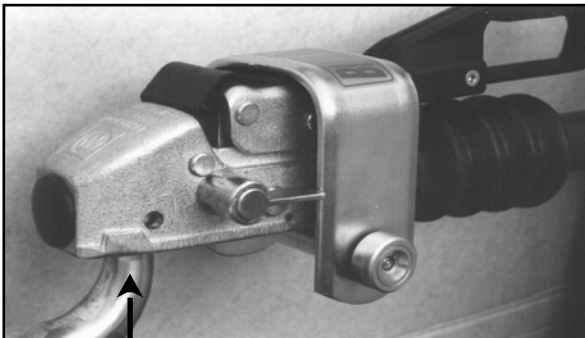

2. Insert the locking bolt through the two holes in the Hitchlock and push lock cup over end of locking bolt. Turn key 1/4 turn clockwise to lock and remove key.

To Unlock. Insert key, rotate 1/4 turn anti-clockwise  
And remove lock cup.



When not attached to vehicle use ball provided.

#### **Bulldog Security Products**

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171 Fax: 01952 728117

Email [sales@bulldogsecure.com](mailto:sales@bulldogsecure.com) [www.bulldogsecure.com](http://www.bulldogsecure.com)

WW09

#### **Lock Lubrication.**

**IMPORTANT** - To ensure free movement of the lock, spray lock mechanism & ball bearings with WD40 (or equivalent) minimum every four months.