


GA50 Multi Clamp Fitting Instructions

The Budget box Multicomp is intended for use on most popular cars, Vans, Caravans, Motorcycles and Trailers with the following Maximum Wheel/Tyre sizes: **A - Height: 190mm. B - Width: 255mm.** **Wheel trims must have holes to allow access for outer clamp arm.**

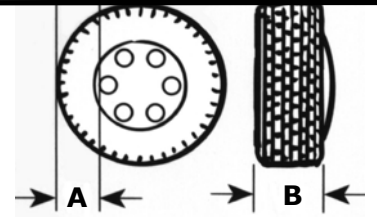

1. Position inner arm behind wheel, hook into rim.



2. Slide inner and outer arms together, ensuring pointed outer arm fits into recess or hole in wheel. Position padlock above the hole closest to the outer arm and turn the key to lock.



3. To remove clamp, insert key, remove padlock together with the inner and outer arms.

Should you wish to obtain additional keys, a local locksmith may be able to copy one of the original keys.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171

Email sales@bulldogsecure.com www.bulldogsecure.com