

**Please Note:** The GA70 Hitch Lock Post is intended for use with the Bulldog Minilock.


**WARNING:**

1. For maximum security you are advised to site the post on a concrete or tarmacadam site - 'NOT ON LOOSE GROUND'.

## Fitting

1. Mark the position on the ground for the socket.
2. Excavate a hole approximately 300mm wide x 300mm deep.
3. Mix the concrete taking care to make sure the mix is not too wet as a fairly firm mix is essential. When carrying out the following steps, care must be taken to ensure no concrete comes into contact with the lock.
4. Partly fill the hole with the concrete to a level approximately 200mm below ground level. Place the socket on the concrete, the correct level has been reached when the bottom of the lock housing is 20mm above ground level.
5. With the socket in place, continue to fill the hole tamping the concrete around the socket until half way up.
6. Insert the post into the socket and check with a spirit level that the post is upright, continue to fill around the socket with the concrete until ground level is reached.
7. Check that the post is still upright. Remove the post and allow the concrete to set for 48 hours prior to use.

**GA70**

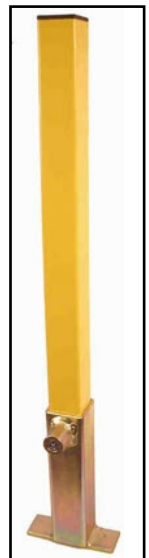

**GA60**

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

**Bulldog Security Products**

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.  
Tel: 01952 728171  
Email sales@bulldogsecure.com    www.bulldogsecure.com

**Lock Lubrication.**

**IMPORTANT** - To ensure free movement of the lock, spray lock mechanism with WD40 (or equivalent) minimum every four months.