

# GA80 Fold Down Security Post Fitting Instructions

**Please Note:**

To install the post you will need suitable foundation bolts. These are available from builders merchants or DIY stores.

Your post is supplied without them as there are many types available and people have different requirements.


Example; Screwfix THROUGH BOLT M8x75mm or THROUGH BOLT M8x91mm

**WARNING:**

For maximum security you are advised to site the post on a concrete or tarmac site - 'NOT ON LOOSE GROUND'. Take care to check for buried cables or pipes.

## Fitting

1. Find a suitable position for the post ensuring the post will be free from obstruction in both the raised and lowered position. The mounting plate should also sit flat on the ground.
2. Using the mounting plate as a pattern, mark the position of the 4 holes.
3. Remove the mounting plate and drill the holes with a suitable drill bit.
4. Reposition the base plate and check that the holes are in alignment.
5. Insert the foundation bolts and tighten.

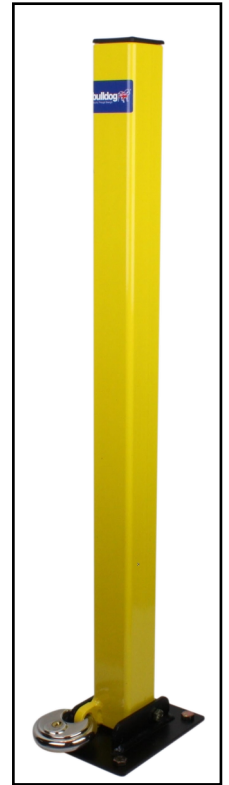

**Should you wish to obtain additional keys, a local locksmith may be able to copy one of the original keys.**

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

**Bulldog Security Products**

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171

Email [sales@bulldogsecure.com](mailto:sales@bulldogsecure.com)    [www.bulldogsecure.com](http://www.bulldogsecure.com)